



PLATE K

CLUTCH

Plate No.	Part No.	Description	No. per Unit	Remarks
	214081	†CLUTCH COVER ASSEMBLY	1	
K1	514717	COVER AND STRAPS, sub assembly	1	} Export only
K2	516213	SPRING, diaphragm	1	
K3	516214	RING, diaphragm spring fulcrum	2	
K4	514698	RIVET, shouldered, diaphragm spring and fulcrum ring to cover	6	
K5	514714	PLATE, pressure	1	
K6	514715	CLIP, retaining diaphragm spring on pressure plate	3	
K7	514713	RIVET, clip and strap to pressure plate	3	
	Not Serviced	WEIGHT, balance, clutch cover		
	Not Serviced	RIVET, balance weight to cover		
K8	147463	DRIVEN PLATE ASSEMBLY	1	Alternative to 149074
	149074	DRIVEN PLATE ASSEMBLY	1	Alternative to 147463
	515277	FACING PACKAGE, driven plate	1	
	HU0805	SCREW, SET, clutch cover to flywheel	6	
	WL0208	WASHER, lock, on set screw	6	
	144716	CLUTCH SLAVE CYLINDER ASSEMBLY	1	
K9	Not Serviced	BODY, slave cylinder		
K10	106084	SPRING, between piston and body	1	
K11	510527	SEAL, on piston	1	
K12	Not Serviced	PISTON, in body	1	
K13	510249	CIRCLIP, retaining piston in body	1	
K14	515298	COVER, dust, over end of body	1	
K15	515299	RETAINER, dust cover	1	
K16	513063	SCREW, bleed	1	
K17	120128	COVER, dust, on bleed screw	1	
	515297	SERVICE KIT, SLAVE CYLINDER (Comprising items K11, 13, 14 and 17)	1	
K18	HB0818	BOLT — Slave cylinder to clutch housing attachment	1	
K19	TN3208	NUT, nyloc — Slave cylinder to clutch housing attachment	1	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme