



PLATE T

# REAR AXLE

Plate No.	Part No.	Description	No. per Unit	Remarks
	511790	†REAR AXLE CENTRE ASSEMBLY	1	} Fitted up to Comm. No. FD22570 only
	513414	†REAR AXLE CENTRE ASSEMBLY (RECONDITIONED UNIT)	1	
	214684	†REAR AXLE CENTRE ASSEMBLY	1	} Fitted from Comm. No. FD22571 (Rear Axle No. FC120000) and future
	516653	†REAR AXLE CENTRE ASSEMBLY (RECONDITIONED UNIT)	1	
T1	209936	AXLE CASING assembly	1	Fitted up to Comm. No. FD22570 only
	516817	AXLE CASING assembly	1	Fitted from Comm. No. FD22571 (Rear Axle No. FC120000) and future
	118826	PLUG, core	1	
T2	114774	PLUG, filler	1	
T3	147993	BUSH, mounting	2	Fitted up to Rear Axle No. FC100600 only
	117578	BUSH, mounting	2	} Fitted from Rear Axle No. FC100601 and future
	149648	RUBBER, mounting, axle casing	2	
	510408	PIN, cotter	1	
T4	211544	PLATE, mounting, rear axle assembly	1	Fitted up to Rear Axle No. FC128021 only
	215539	PLATE, mounting, rear axle assembly	1	Fitted from Rear Axle No. FC128022 and future
T5	WN0710	WASHER — Mounting plate to hypoid housing	4	
T6	132856	BOLT — Mounting plate to hypoid housing	4	
T7	509815	HOUSING ASSEMBLY, hypoid	1	
T8	Not Serviced	CAP, bearing		
T9	60070	BUSH, bearing cap	4	
T10	104554	BOLT — Bearing cap attachment	4	
T11	WL0209	WASHER, lock — Bearing cap attachment	4	
T12	304982	CASING, differential	1	Fitted up to Comm. No. FD22570 (Rear Axle No. FC106498) only
	305778	CASING, differential	1	Fitted from Comm. No. FD22571 (Rear Axle No. FC120000) and future
T13	130355	BEARING, differential casing to hypoid housing	2	
T14	123817	SHIM, adjusting differential bearing (.020")	A/R	
T14	123815	SHIM, adjusting differential bearing (.014")	A/R	
T14	123814	SHIM, adjusting differential bearing (.013")	A/R	
T14	123813	SHIM, adjusting differential bearing (.009")	A/R	
T15	510005	CROWN WHEEL AND PINION assembly	1 pr.	
T16	129781	BOLT — Crown wheel to differential casing	8	
T17	118977	WASHER, lock — Crown wheel to differential casing	8	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme

# REAR AXLE

Plate No.	Part No.	Description	No. per Unit	Remarks
<b>REAR AXLE CENTRE ASSEMBLY — (continued)</b>				
T18	108979	GEAR, differential — 16 teeth	2	} Fitted up to Comm. No. FD22570 (Rear Axle No. FC106498) only
T19	104570	WASHER, thrust, for differential gear	2	
T20	104571	PINION, differential — 10 teeth	2	
T21	104572	WASHER, thrust, pinion gear (.036")	A/R	
T21	108935	WASHER, thrust, pinion gear (.040")	A/R	
T21	108936	WASHER, thrust, pinion gear (.044")	A/R	
T21	108937	WASHER, thrust, pinion gear (.048")	A/R	
T21	108938	WASHER, thrust, pinion gear (.052")	A/R	
T21	108939	WASHER, thrust, pinion gear (.056")	A/R	
T22	104573	PIN, cross, differential	1	
T18	134073	GEAR, differential — 16 teeth	2	
T19	134075	WASHER, thrust, for differential gear	2	
T20	134074	PINION, differential — 10 teeth	2	
T21	148805	WASHER, thrust, spherical, pinion gear (.041")	A/R	
T21	147249	WASHER, thrust, spherical, pinion gear (.029")	A/R	
T21	147250	WASHER, thrust, spherical, pinion gear (.033")	A/R	
T21	147251	WASHER, thrust, spherical, pinion gear (.037")	A/R	
T21	147252	WASHER, thrust, spherical, pinion gear (.043")	A/R	
T21	138440	WASHER, thrust, spherical, pinion gear (.027")	A/R	
T21	138442	WASHER, thrust, spherical, pinion gear (.039")	A/R	
T21	138441	WASHER, thrust, spherical, pinion gear (.035")	A/R	
T21	134076	WASHER, thrust, spherical, pinion gear (.030"/.032")	A/R	
T22	134072	PIN, cross, differential	1	
T23	110376	PIN, locating, cross pin in differential housing	1	
T24	104556	BEARING, roller, pinion head	1	
T25	100554	SHIM, adjusting, bearing (pinion head) .010"	A/R	
T25	100563	SHIM, adjusting, bearing (pinion head) .005"	A/R	
T25	100562	SHIM, adjusting, bearing (pinion head) .003"	A/R	
T26	110907	SPACER, between bearings	1	
T27	104557	BEARING, roller, pinion nose	1	
T28	104561	SHIM, adjusting, bearing (pinion nose) .010"	A/R	
T28	104563	SHIM, adjusting, bearing (pinion nose) .005"	A/R	
T28	104562	SHIM, adjusting, bearing (pinion nose) .003"	A/R	
T29	109054	SEAL, oil, on pinion	1	
T30	121770	FLANGE, pinion and stone guard assembly	1	
T31	WP0022	WASHER, plain, between pinion flange and nut	1	
T32	109049	NUT, slotted, securing flange to pinion	1	
T33	PC0011	PIN, cotter, locking nut	1	
T34	114749	WASHER, joint — Hypoid housing to axle housing	1	
T35	HU0808	SCREW, set — Hypoid housing to axle housing	8	
T36	WL0208	WASHER, lock — Hypoid housing to axle housing	8	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme

# REAR AXLE

Plate No.	Part No.	Description	No. per Unit	Remarks
<b>REAR AXLE CENTRE ASSEMBLY — (continued)</b>				
T37	132649	INNER AXLE SHAFT ASSEMBLY	2	} Fitted up to Comm. No. FD22570 (Rear Axle No. FC106498) only
T38	117948	BEARING, ball	2	
	149117	INNER AXLE SHAFT ASSEMBLY	2	} Fitted from Comm. No. FD22571 (Rear Axle No. FC120000) and future
	128572	BEARING, ball	2	
T39	120327	WASHER, thrust	2	} Fitted up to Comm. No. FD22570 (Rear Axle No. FC106498) only
T40	132650	CIRCLIP	2	
T41	117547	CAP, bearing retaining	2	
	139532	CIRCLIP	2	} Fitted from Comm. No. FD22571 (Rear Axle No. FC120000) and future
	139530	CAP, bearing retaining	2	
T42	117952	SEAL, oil	2	
T43	123803	SCREW — Bearing retaining cap to housing	8	
T44	WL0207	WASHER — Bearing retaining cap to housing	8	
T45	136818	STUD, rear road spring	6	
T46	136869	BOLT — Rear axle to frame	1	
T47	WP0110	WASHER, plain — Rear axle to frame	1	
T48	YN2910	NUT, nyloc — Rear axle to frame	1	
T49	133568	RUBBER, mounting, rear axle, upper	2	
T50	131796	RUBBER, mounting, rear axle, lower	2	
T51	WM0810	WASHER, medium	2	
T52	132419	WASHER, distance	A/R	
T53	TN3209	NUT, nyloc	2	
T54	129003	OUTER AXLE SHAFT AND FLINGER ASSEMBLY (B.R.D.)	2	
	128135	SHAFT, yoke, assembly	2	
	128136	FLANGE, yoke	2	
T55	513800	UNIT PACKAGE	2	
T56	128651	CIRCLIP, half shaft joint	4	
	128469	FLINGER	2	
T57	129361	BOLT — Shaft joint to inner axle shaft	8	
T58	510561	NUT, nyloc — Shaft joint to inner axle shaft	8	
T59	204226	REAR HUB (INNER)	2	
T60	509539	PLUG, screwed, inner hub	2	Alternative to 122115 Alternative to 509539
T60	122115	PLUG, screwed, inner hub	2	
T61	117853	BEARING, needle roller	2	
T62	128978	SEAL, oil	2	
T63	141221	PIECE, distance	2	
T64	141444	SHIELD, inner	4	
T65	141218	BEARING, nylon, inner hub	4	
T66	141185	SEAL, dirt	4	
T67	141443	SHIELD, outer	4	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme

# REAR AXLE

Plate No.	Part No.	Description	No. per Unit	Remarks
<b>REAR HUB - (continued)</b>				
T68	104585	BEARING, ball, rear hub	2	
T69	107193	SEAL, oil	2	
T70	104773	HOUSING, oil seal	2	
T71	106664	WASHER, joint, oil seal housing	2	
T72	104582	CATCHER, oil	2	
T73	121862	BOLT - Oil seal housing and back plate attachment	8	
T74	121860	WASHER, tab - Oil seal housing and back plate attachment	4	
T75	131567	REAR HUB AND STUD ASSEMBLY	2	
T76	112429	STUD, wheel	8	
T77	104581	KEY, axle shaft - Rear hub to axle shaft	2	
T78	142333	WASHER, plain - Rear hub to axle shaft	2	
T79	510618	NUT, nyloc - Rear hub to axle shaft	2	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme