



ACCELERATION CONTROL

Plate No.	Part No.	Description	No. per Unit	Remarks
X1	212323	ACCELERATOR PEDAL ASSEMBLY — R.H.S. (Comprising items X1, X2, X3, X14)	1	
X2	HU0809	SCREW, set — Fitted to accelerator stop bracket	1	
X3	HN2008	NUT — Fitted to accelerator stop bracket	1	
X4	137015	BRACKET, fulcrum assembly	1	
X5	HU0704	SCREW, set — Fulcrum bracket to body	2	
X6	WP0007	WASHER, plain — Fulcrum bracket to body	2	
X7	WL0207	WASHER, lock — Fulcrum bracket to body	2	
X8	WD0159	WASHER, lock (double coil) — Locating pedal in bearing	1	
X9	WP0009	WASHER, plain — Locating pedal in bearing	1	
X10	PC0009	PIN, cotter — Locating pedal in bearing	1	
X11	134540	BEARING, accelerator pedal	1	
X12	134953	SEAL, felt — Fitted on pedal cross shaft	1	
X13	WP0009	WASHER, plain — Fitted on pedal cross shaft	1	
X14	142500	LEVER assembly, accelerator operating	1	
X15	DS1312	DOWEL, spring, attaching lever to pedal shaft	1	
X16	212358	ACCELERATOR PEDAL ASSEMBLY — L.H.S. (Comprising items X16, X17, X18, X23)	1	
X17	HU0809	SCREW, set — Fitted to accelerator stop bracket	1	
X18	HN2008	NUT — Fitted to accelerator stop bracket	1	
X19	134540	BEARING, accelerator pedal	2	
X20	WD0159	WASHER, double coil — Locating pedal in bearing	1	
X21	WP0009	WASHER, plain — Locating pedal in bearing	2	
X22	PC0009	PIN, cotter — Locating pedal in bearing	1	
X23	142500	LEVER assembly, accelerator operating	1	
X24	DS1312	DOWEL, spring, attaching lever to pedal	1	
X25	149435	THROTTLE OPERATING ROD	1	
X26	WL0207	WASHER, lock — Rod to operating and carburettor levers	2	
X27	HN2007	NUT — Rod to operating and carburettor levers	2	
X28	136835	SPRING, throttle return	1	
X29	136979	LINK, throttle return spring	1	

Note:—Items marked thus † are available on our Factory Exchange Unit Scheme